


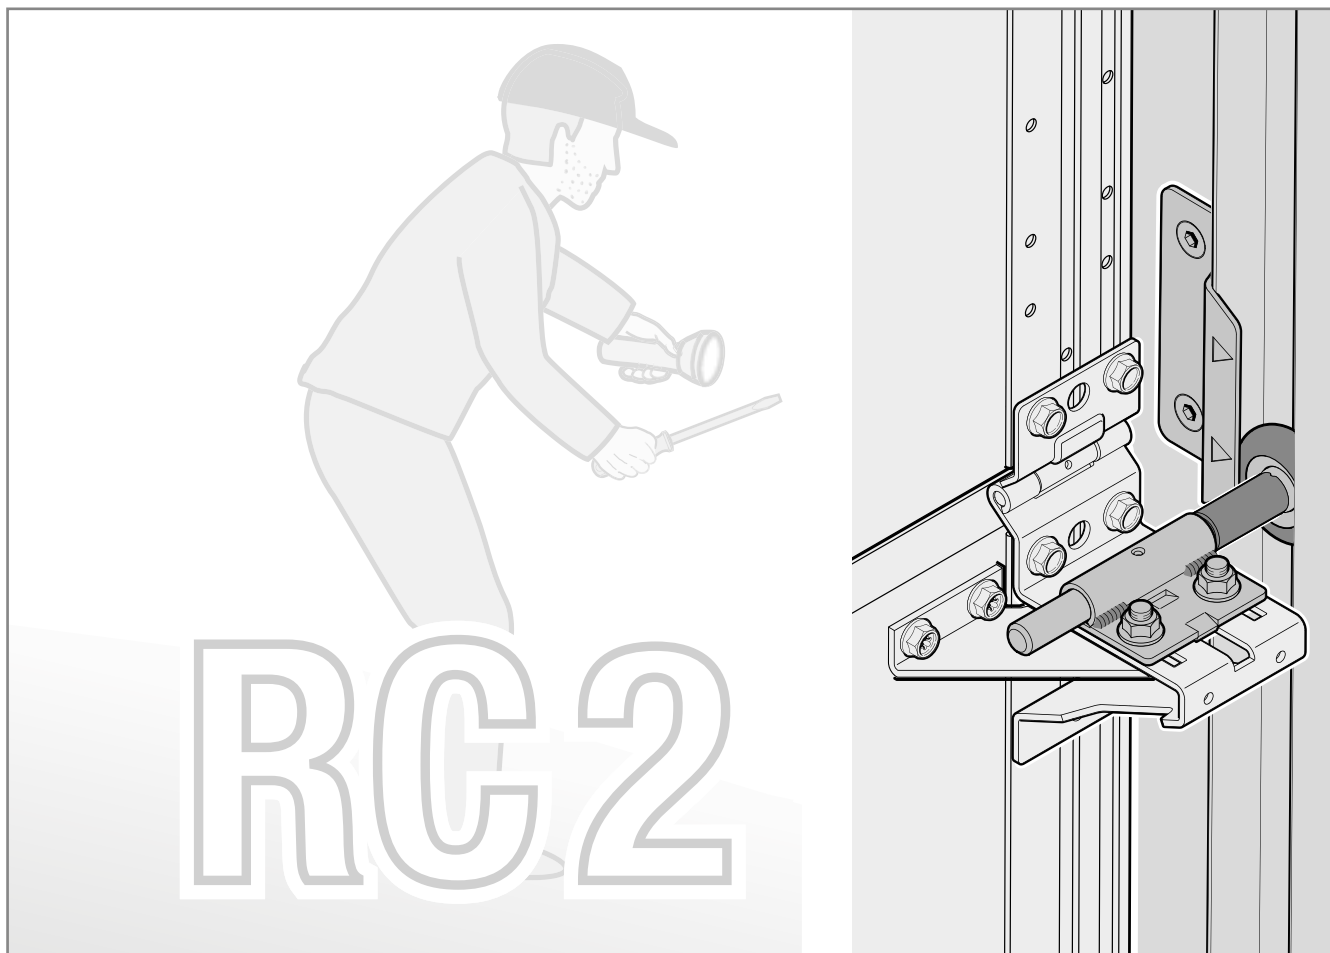

DE

Anleitung für Montage, Betrieb, Wartung und Demontage

einbruchhemmender Beschlag Klasse RC2 nach DIN/TS 18194

EN

Instructions for Fitting, Operating, Maintenance and Dismantling

Break-in-resistant track application class RC2 according to DIN/TS 18194

FR

Notice de montage, d'utilisation, d'entretien et de démontage

Ferrure anti-effraction classe CR 2 selon DIN/TS 18194

ES

Instrucciones para el montaje, funcionamiento, mantenimiento y desmontaje

Guías antiintrusión de clase RC2 según DIN/TS 18194

RU





Руководство по монтажу, эксплуатации, техобслуживанию и демонтажу

Фурнитура с защитой от взлома класса RC2 согласно стандарту DIN/TS 18194





+

NL	PL	SL	FI	TR	LV	EL
IT	HU	NO	DA	LT	HR	RO
PT	CS	SV	SK	ET	SR	BG

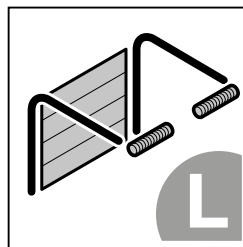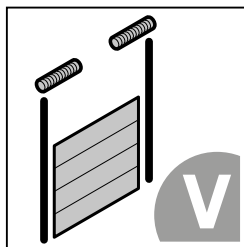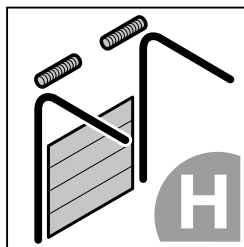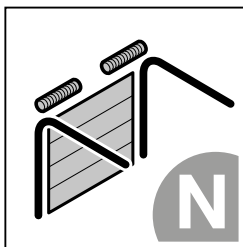

3097159
3097160
3097161
3102886

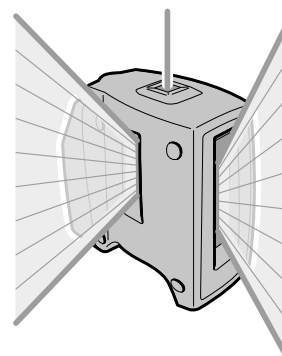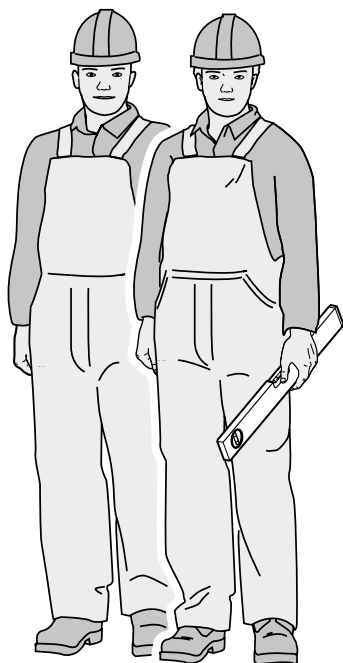

Ø5; Ø7; Ø9 


Ø12 

8 

10 

13 




17 








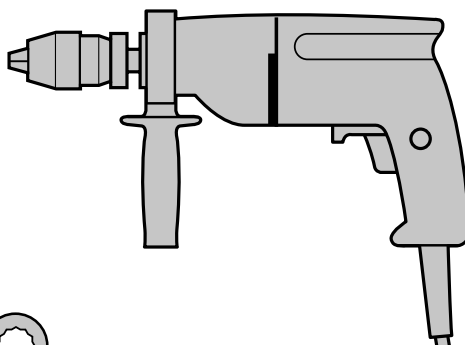













8; 10; 13; 17    









T25; T30   

T15; T20   

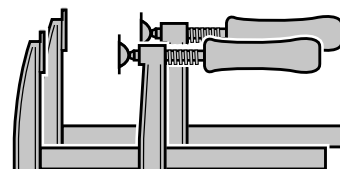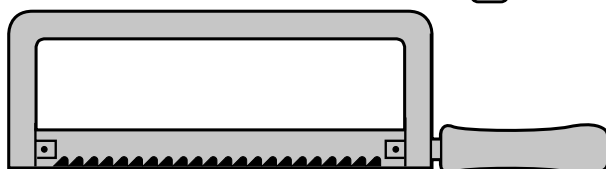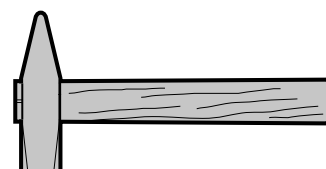

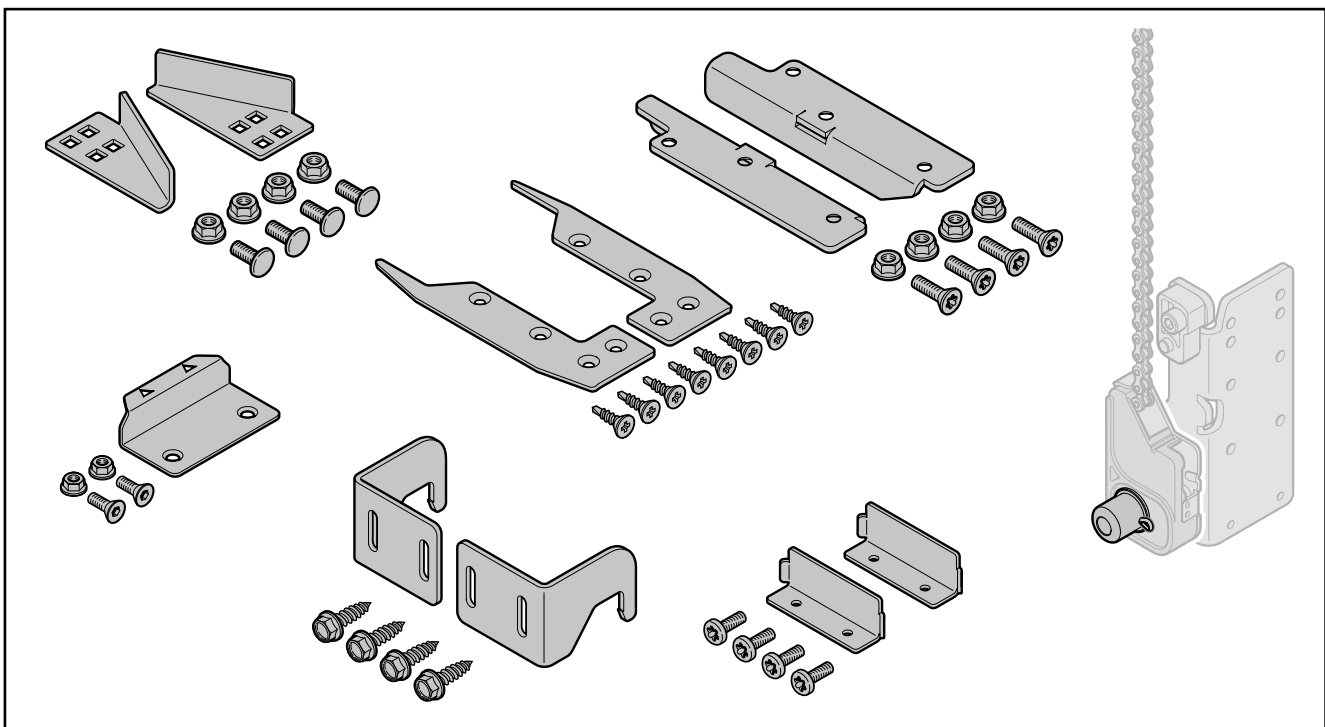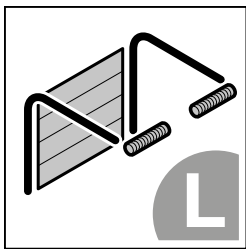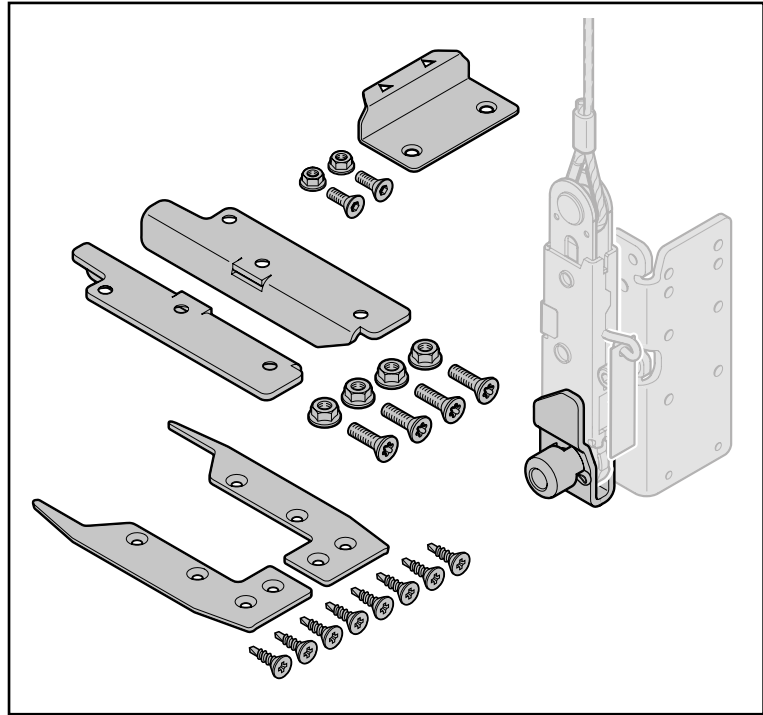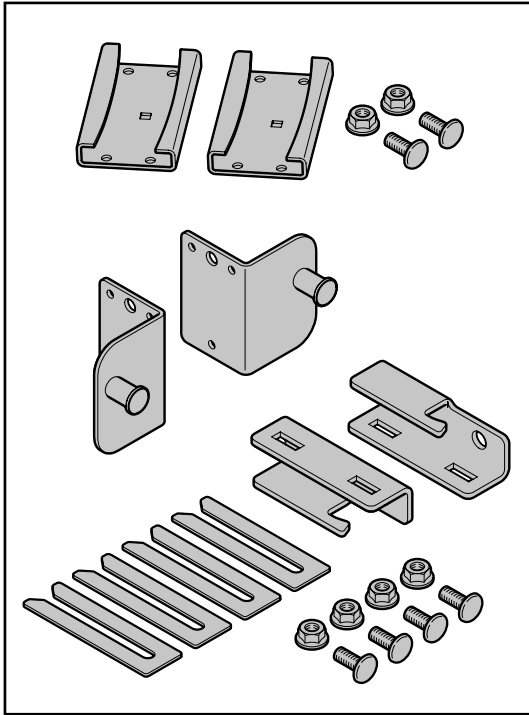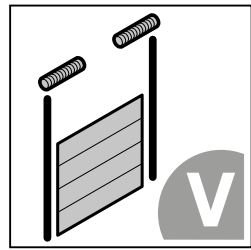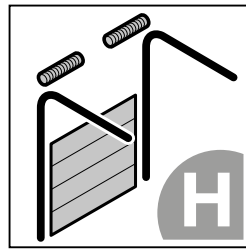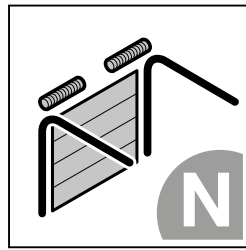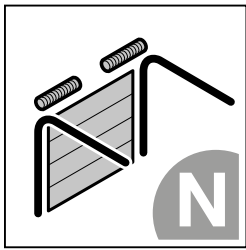

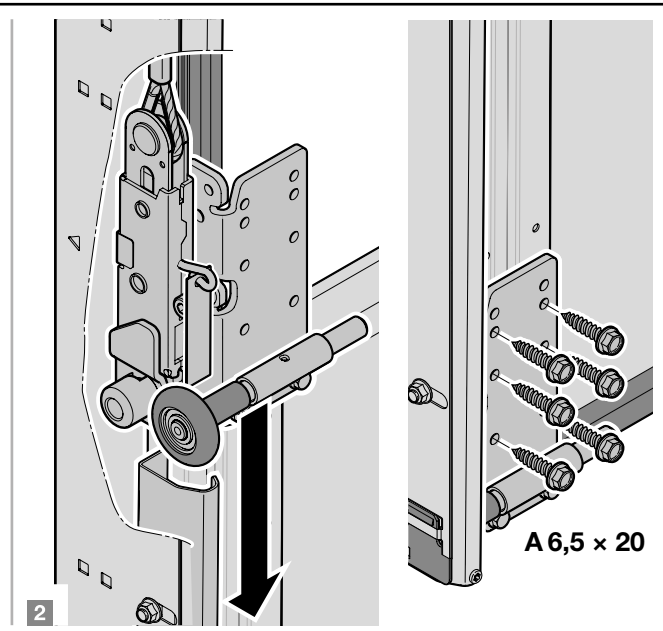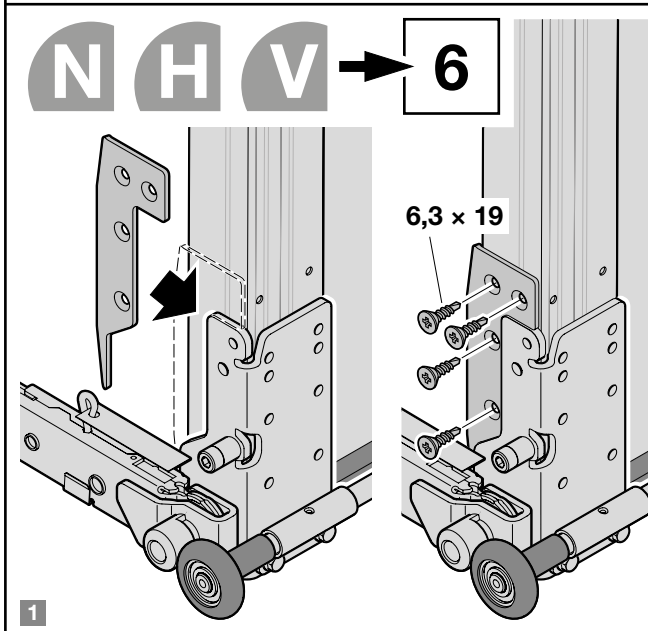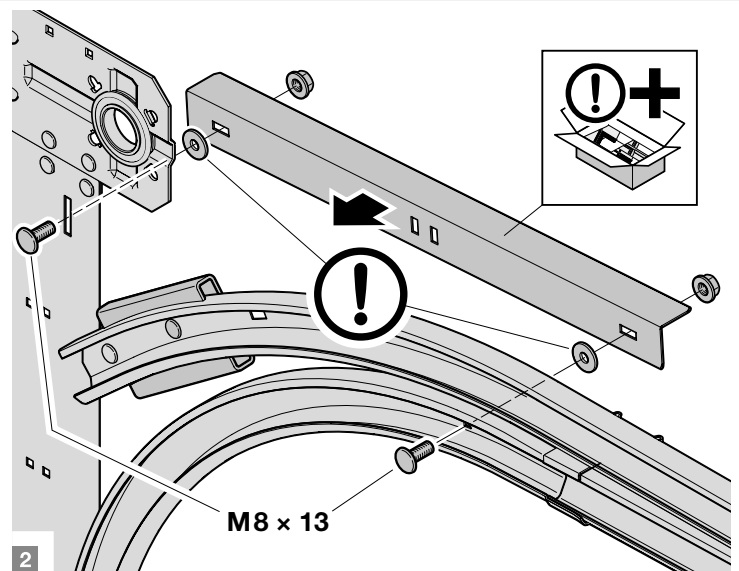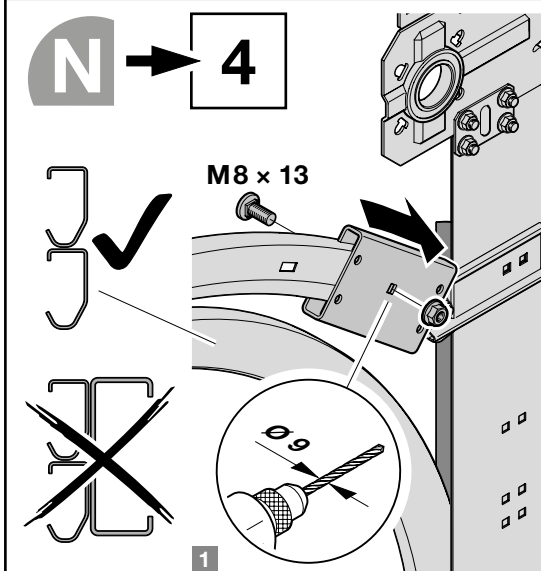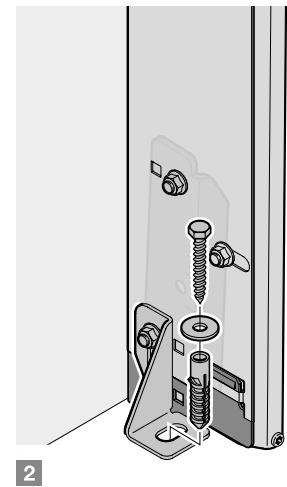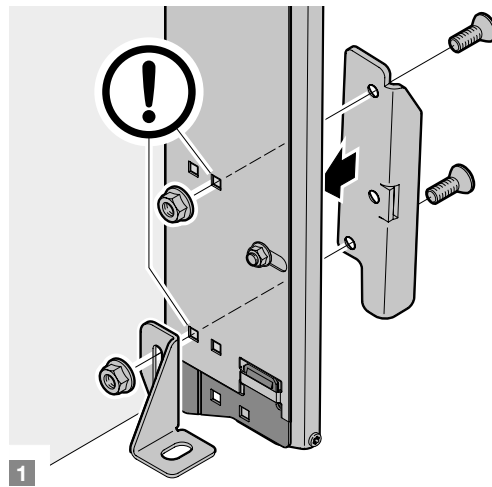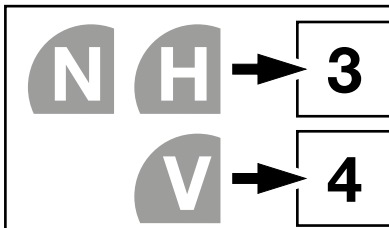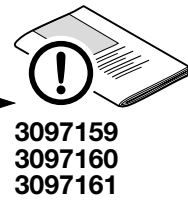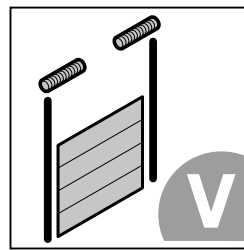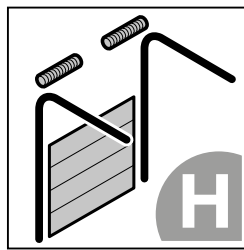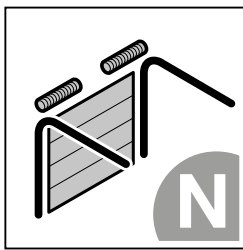

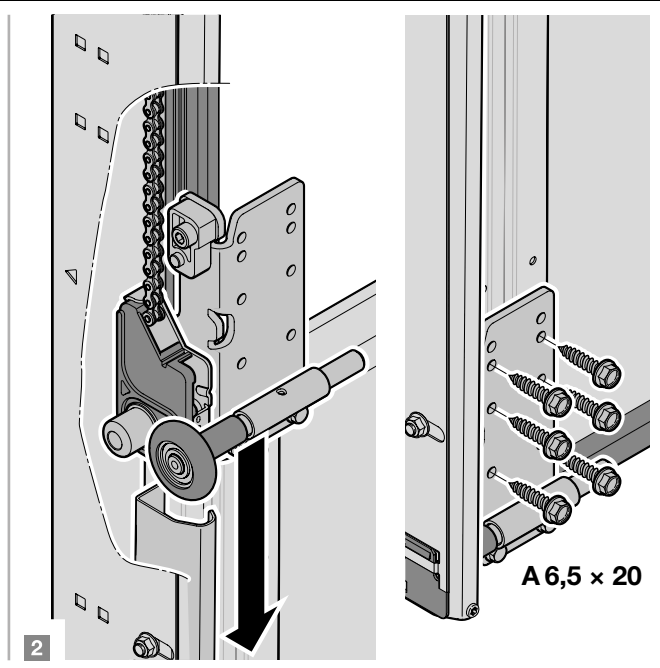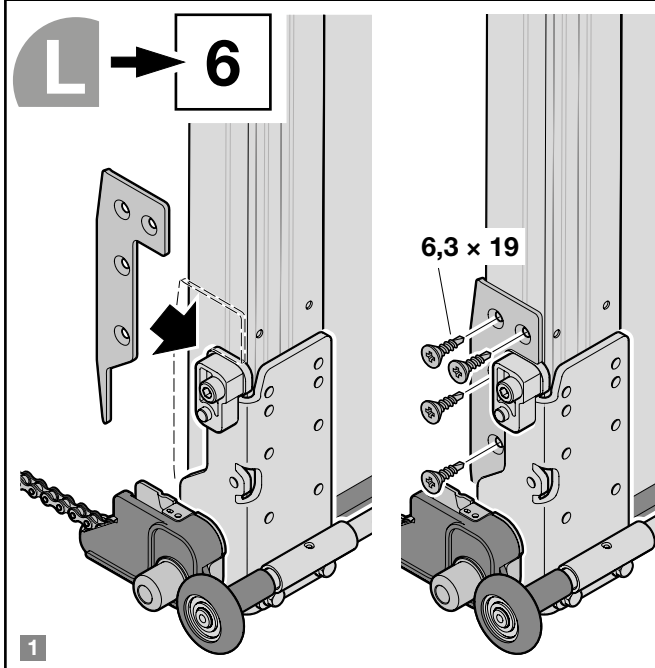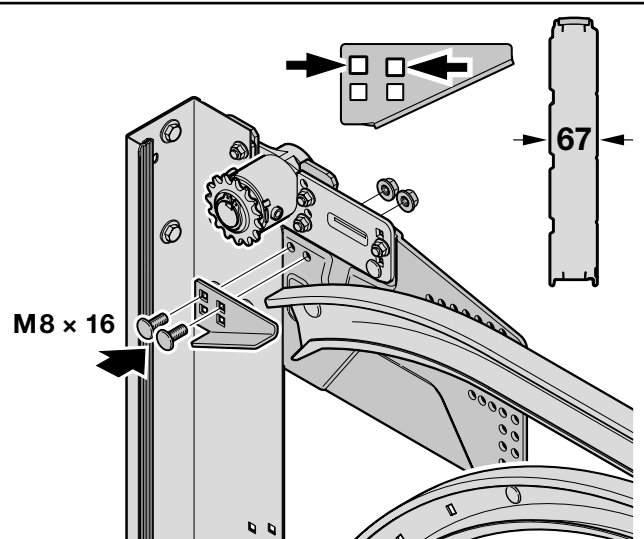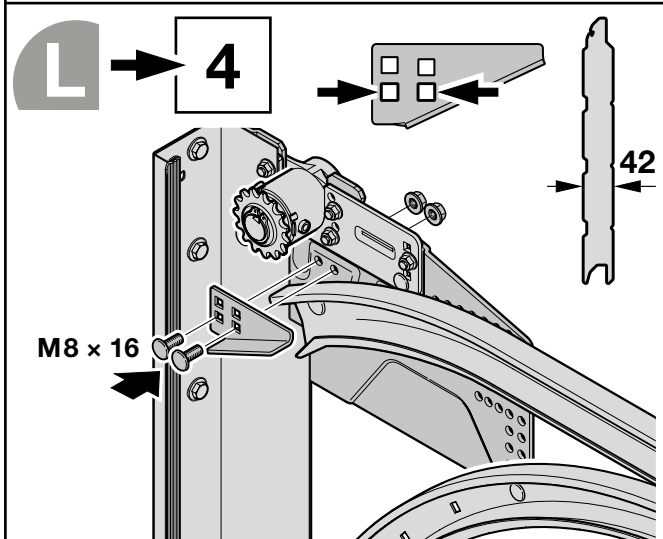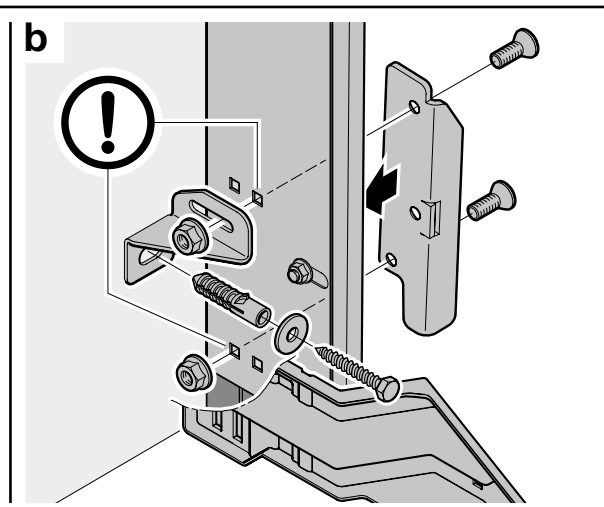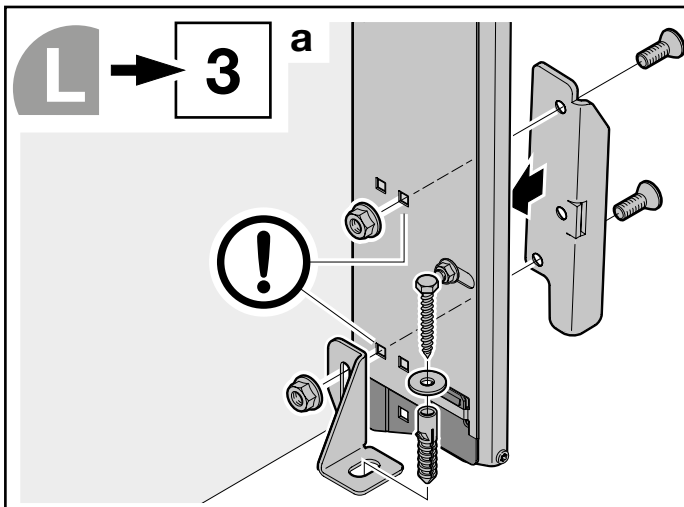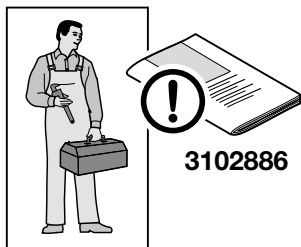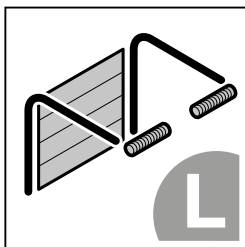

L → 12

